



SANITARY SEWER MANHOLE

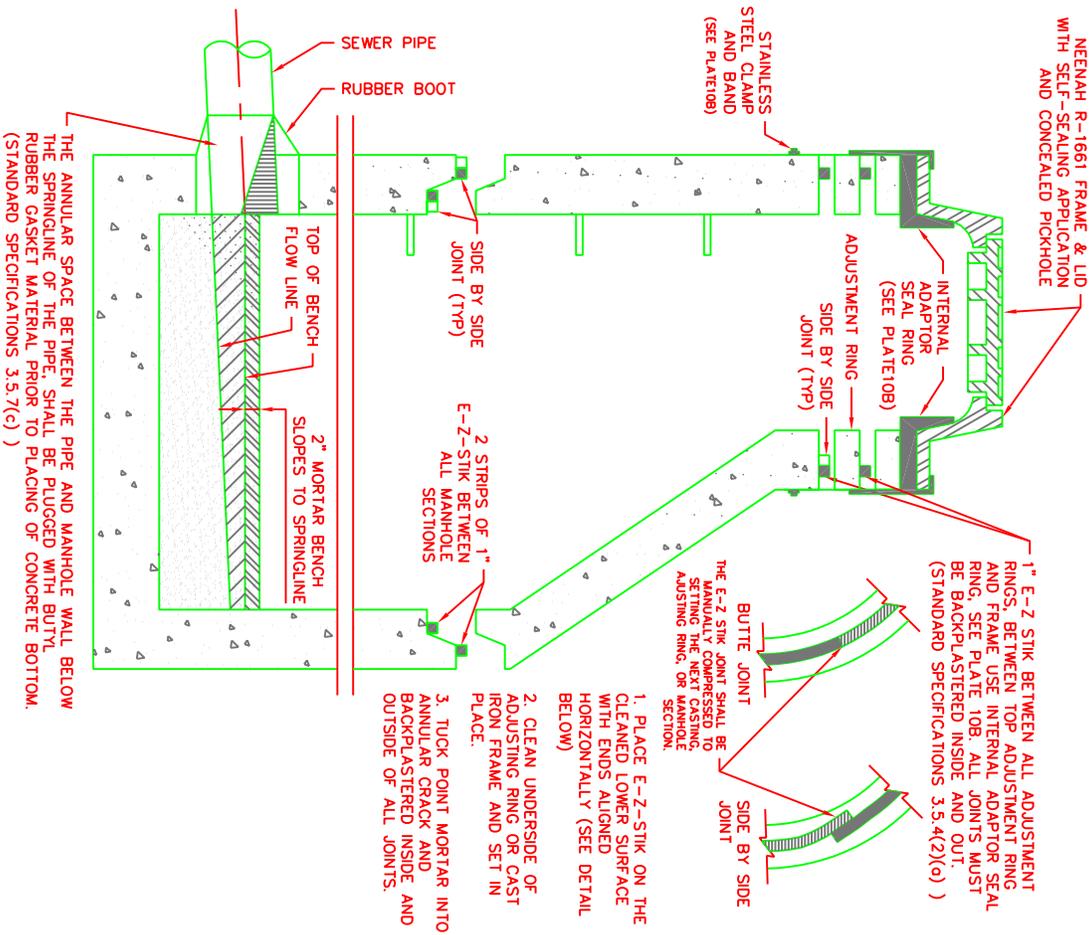

NOT TO SCALE

1. PLACE E-Z-STIK ON THE CLEANED LOWER SURFACE WITH ENDS ALIGNED HORIZONTALLY (SEE DETAIL BELOW)
2. CLEAN UNDERSIDE OF ADJUSTING RING OR CAST IRON FRAME AND SET IN PLACE.
3. TUCK POINT MORTAR INTO ANNUAL CRACK AND BACKPLASTERED INSIDE AND OUTSIDE OF ALL JOINTS.

INTERNAL ADAPTOR SEAL RING (I.A.S. RING)

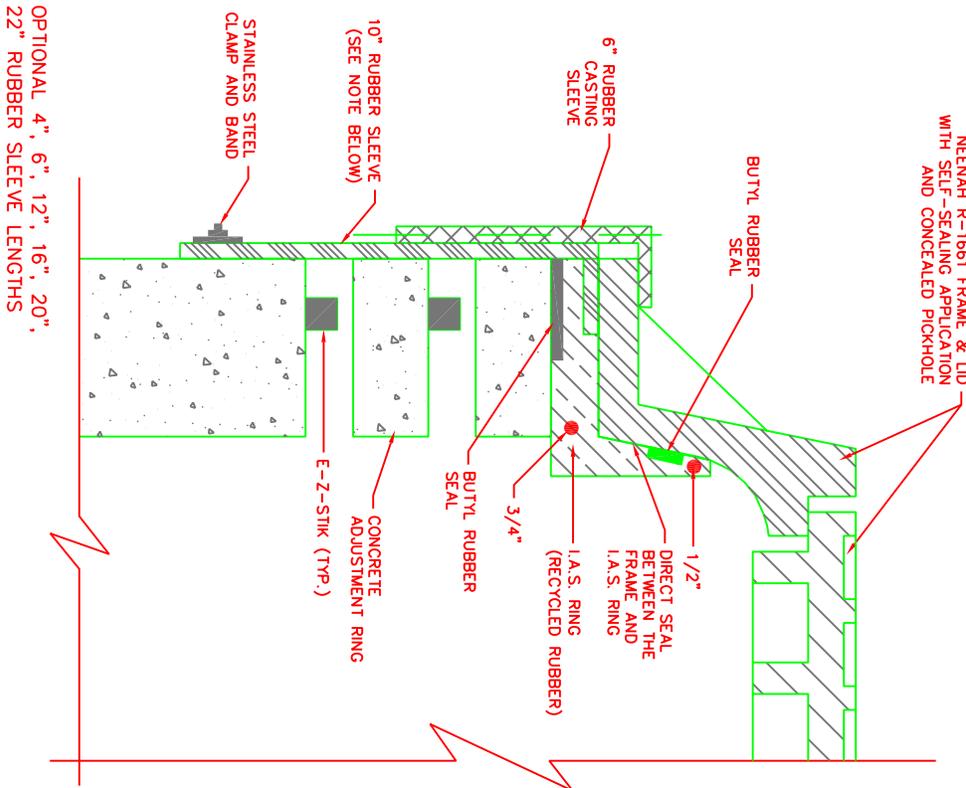

NOT TO SCALE



Village of Whitefish Bay Engineering

5300 N Mariborough Drive

414-962-6690

SANITARY SEWER MANHOLE

Scale = None

REV-JUN06

Sheet 1 of 1

DETAIL 14